




Dell Inspiron M5010 Individual Keys on Keyboard Replacement


This guide will demonstrate how to remove single keys from the keyboard.

Written By: April Poucher

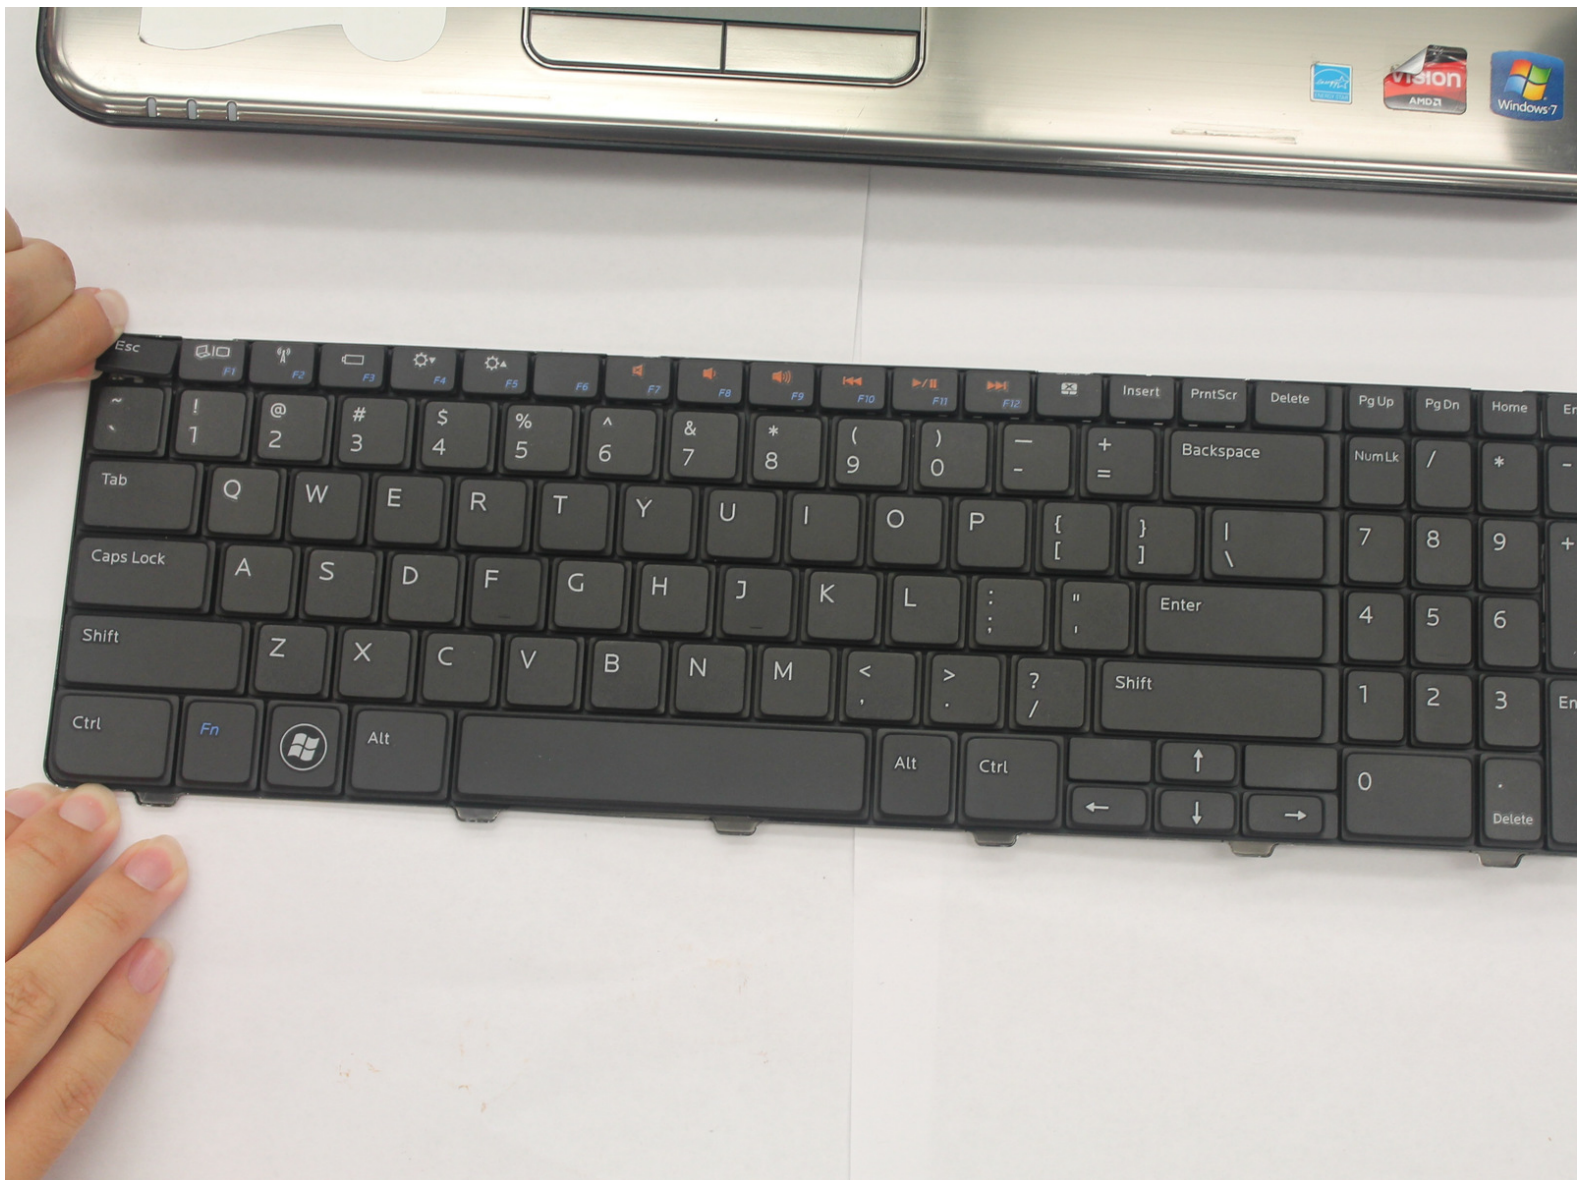



Step 1 — Battery



 Make sure laptop is powered off before removing the battery.

- Follow the arrows, sliding both tabs towards the outer edge of the computer to release the battery.
- Note: battery not shown.


Step 2 — Individual Keys on Keyboard

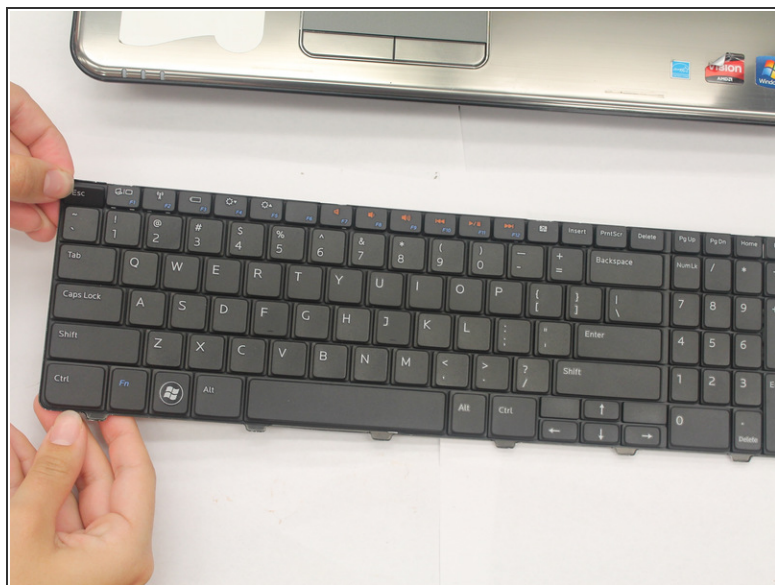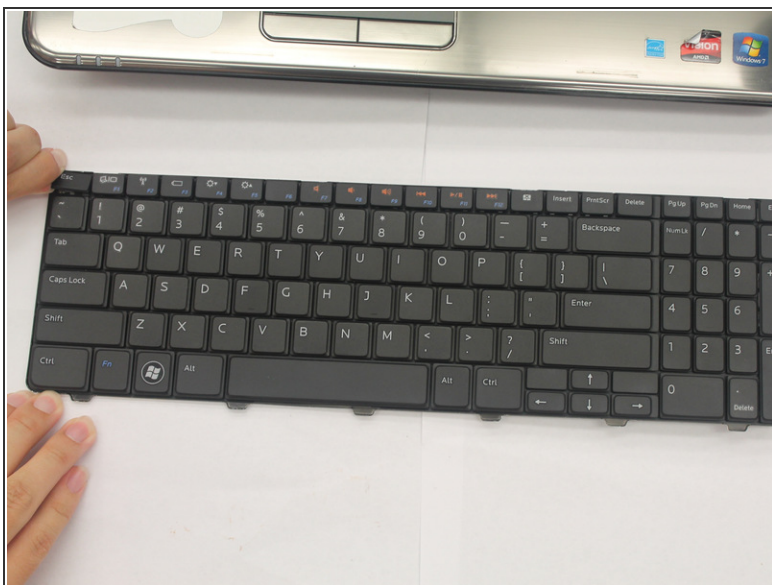

- Lift key slightly from keyboard.

 Keyboard does not have to be removed from the laptop in order to replace a key.

Step 3

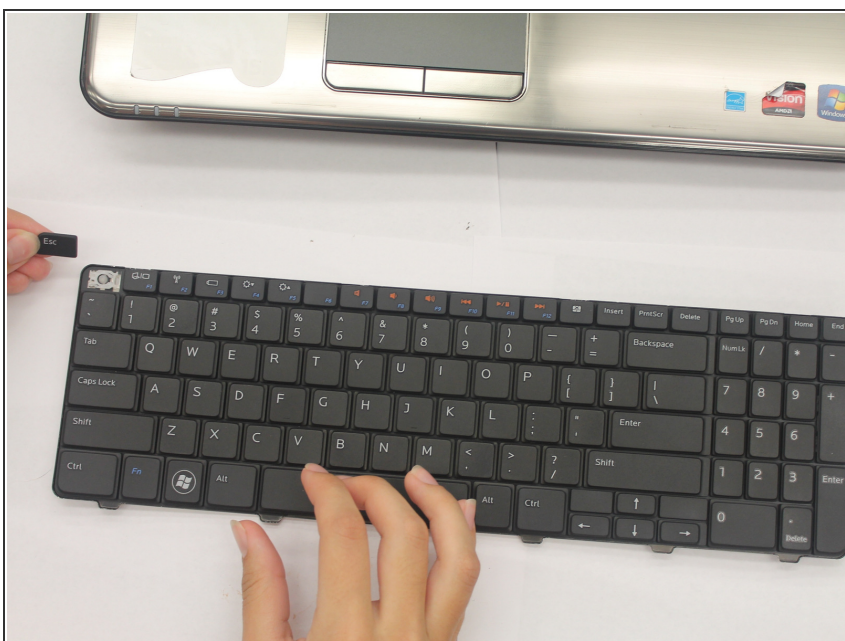

- Unsnap key from keyboard.

To reassemble your device, follow these instructions in reverse order.

